ROFLEX 20 multi
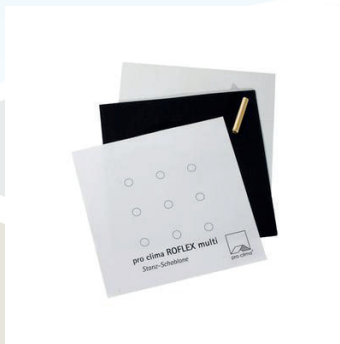
Multi conduit grommet for up to 9 conduits, for interior and exterior use

Technical data

Substance	
Material	EPDM

Attribute	Regulation	Value
Colour		black
Exposure time		6 months
Application temperature		above -10 °C ; 14 °F
Temperature resistance		permanent -40 °C to 150 °C ; -40 °F to 302 °F
Storage		cool and dry

Area of application

For quick, permanently sealed feedthroughs of up to 9 pipes with a diameter of 15 to 30 mm through the airtightness layer or underlays. Every grommet is supplied as a complete set incl. template and punching tool. Stick with TESCON VANA (included in the double packaging unit).

Forms of delivery

Art. no.	GTIN	Length	Width	Contents	Weight
12936	4026639129369	200 mm	200 mm	2 pieces	0.3 kg

Advantages

- ✔ Keeps building components dry: quick and simple sealing
- ✔ Reliable joints thanks to TESCON VANA with waterproof SOLID adhesive
- ✔ Practical handling: pipes can be pushed and pulled through the grommet – the joint remains sealed
- ✔ Extremely flexible and elastic, no protruding sleeve
- ✔ Construction in adherence with standards: for airtight bonding in accordance with DIN 4108-7, SIA 180 and RT 2012
- ✔ Excellent values in the hazardous substance test, has been tested according to the ISO 16000 evaluation scheme

pro clima®

Substrates

Clean subsurfaces before sticking.
Adhesion to frozen surfaces is not possible. There must be no water-repellent substances (e.g. grease or silicone) on materials to be bonded. Subsurfaces must be sufficiently dry and stable.

Permanent adhesion is achieved on all pro clima interior and exterior membranes, other vapour retarder and airtight membranes (e.g. those made of PE, PA, PP and aluminium) as well as other underlay/sarking and wall lining membranes (e.g. those made of PP and PET).
Bonding and joints are possible on planed and painted wood, hard plastics and metal (e.g. pipes, windows etc.), hard wood-based panels (chipboard, OSB, plywood, MDF and wood fibre underlay panels).
Pretreatment with TESCON PRIMER is required in the case of adhesion to wood-fibre underlay panels and smooth mineral subsurfaces. Concrete or plaster subsurfaces must not be sandy or crumbling.

The best results in terms of structural stability are achieved on high-quality subsurfaces.
It is your responsibility to check the suitability of the subsurface; adhesion tests are recommended in certain cases.
Pretreatment with TESCON PRIMER is recommended in the case of subsurfaces with insufficient stability.

General conditions

The bonds should not be subjected to tensile strain.
Press firmly to secure the adhesive tapes in place. Ensure that there is sufficient resistance pressure.
Windproof, airtight or rainproof bonding can only be achieved on vapour retarders or underlay/sarking/facade membranes that have been laid without folds or creases.
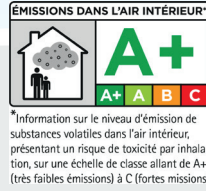Ventilate continuously and systematically to prevent build-up of excessive humidity; use a dryer if necessary.

CERTIFIED COMPONENT
Passive House Institute

Tested for hazardous
substances according to
ISO 16000
For healthier indoor air

ÉMISSIONS DANS L'AIR INTÉRIEUR*

A+

A+ A B C

*Information sur le niveau d'émission de
substances volatiles dans l'air intérieur,
présentant un risque de toxicité par inhala-
tion, sur une échelle de classe allant de A+
(très faibles émissions) à C (fortes missions)

pro clima®